


## **Repair Parts Sheet**

RC101, RC102, RC104, RC106, RC108, RC1010, RC1012, RC1014

Repair Parts Sheet	Revision	Revision Date	Product Code Beginning	
Reference nr. L2802	Rev.A	02/2009	D	

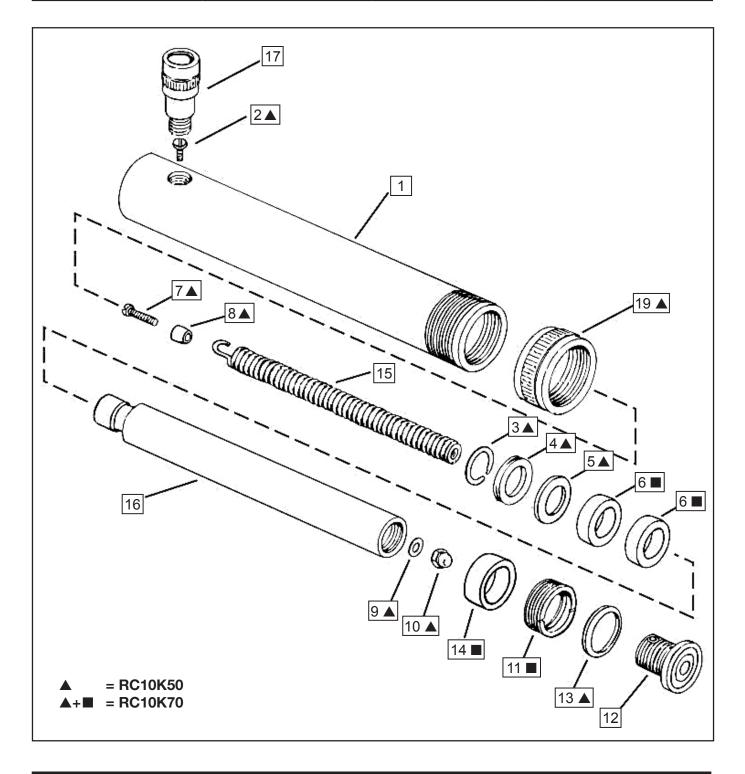

Repair Parts List								L 2802		
ltem Nr.	Description	Qty.	RC101	RC102	RC104	RC106	RC108	RC1010	RC1012	RC1014
1	Base	1	Not available, order new cylinder							
2	Screw	1								
3	Retaining ring	1								
4	U cup	1								
5	Washer	1								
6A	Rod bearing	2								
6B	Rod Bearing	1								
7A	Screw	1								
7B	Self taping Screw (Not shown)									
8	Bushing	1								
9	Gasket	1								
10	Acorn Nut	1								
11	Bearing Stop ring	1								
12	Saddle Assembly	1		A102G	A102G	A102G	A102G	A102G	A102G	A102G
13	Wiper	1								
14	Bearing sleeve	1								
15	Spring (Incl. Items 7,8,9,10)	1	L202110SR	L202110SR	CB425110SR	F937110SR	CF289110SR	F938110SR	CF290110SR	L119110SR
16	Plunger	1	Not available, order new cylinder							
17	Coupler	1	CR400	CR400	CR400	CR400	CR400	CR400	CR400	CR400
18	Dust Cap (not shown)	1								
19	Thread Protector	1								
20	O ring coupler (not shown)	1								
21	Warning Decal (not shown)	1								
22	Enerpac Decal (not shown)	2								
23	O Ring Saddle (not shown)	1								

▲ = Items are included and available only as Part of Repair kit RC10K50.

Items are included and available only as Part of Repair kit RC10K70. Repair Kit RC10K70 includes RC10K50.



Item Nr.	Torque / Notes			
5	Washer to be placed with the sharp edge towards U Cup			
7A	Firmly tighten screw to assure secure contact with the plunger.			
7B	5,4 – 6,8 Nm 4 -5 ft lbs			
10	10.8 – 13.5 Nm 8 – 10 ft lbs			
11	7.9 -10.2 Nm 70 – 90 in lbs			
11	Secure with Loctite 222			
17	34 – 81 Nm 25 – 60 ft lbs			
17	Use Loctite 545 or Teflon tape.			



## To maintain your warranty, have your products inspected and repaired by an authorised Enerpac Service Centre

www.enerpac.com