


Repair Parts Sheet

RC151, RC152, RC154, RC156, RC158, RC1510, RC1512, RC1514

| Repair Parts Sheet | Revision | Revision Date | Product Code Beginning | | |
|---------------------|----------|---------------|---------------------------|--|--|
| Reference nr. L2803 | Rev.A | 02/2009 | A | | |

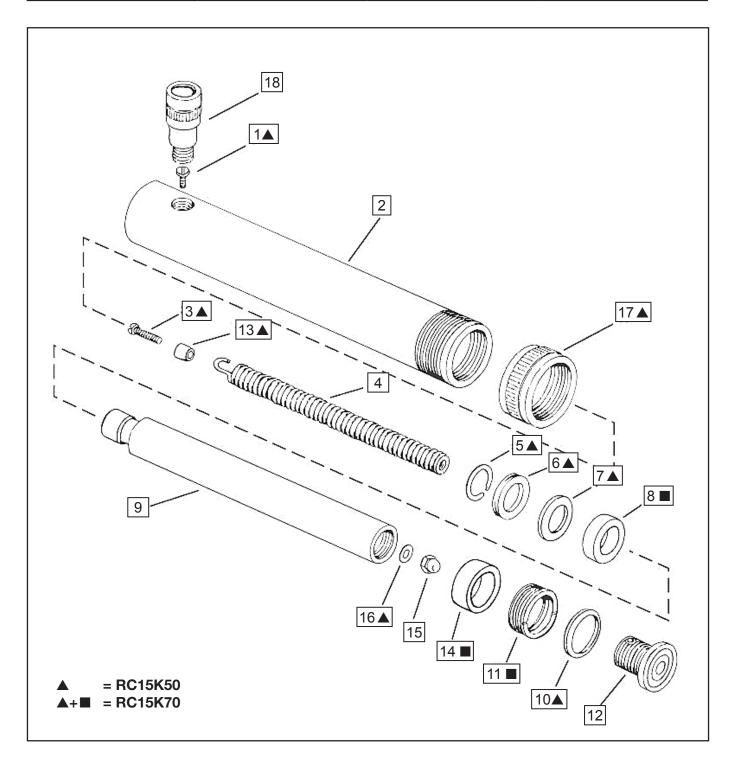

| Repair Parts List | | | | | | | L 2803 | | | |
|-------------------|------------------------------------|------|------------------------------------|------------------------------------|------------|-----------|------------|-----------|------------|-----------|
| Item nr. | Description | Qty. | RC151 | RC152 | RC154 | RC156 | RC158 | RC1510 | RC1512 | RC1514 |
| 1 | Screw | 1 | A | A | A | A | A | A | A | A |
| 2 | Cylinder | 1 | | Not available, order new cylinder. | | | | | | |
| 3A | Screw | 1 | | | | A | A | A | A | A |
| 3B | Self taping screw | 1 | A | A | A | | | | | |
| 4 | Spring (incl. item 3,13,15 and 16) | 1 | L202110SR | L202110SR | CB425110SR | F937110SR | CF289110SR | F938110SR | CF290110SR | L119110SR |
| 5 | Retaining ring | 1 | A | A | A | A | A | A | A | A |
| 6 | U cup | 1 | A | A | A | A | A | A | A | A |
| 7 | Washer | 1 | A | A | A | A | A | A | A | A |
| 8 | Rod Bearing | 1 | | | • | • | | | • | |
| 9 | Plunger | 1 | Not available, order new cylinder. | | | | | | | |
| 10 | Wiper Ring | 1 | A | A | A | A | A . | A | A . | A |
| 11 | Stop Ring | 1 | | | • | • | | | • | |
| 12 | Grooved saddle | 1 | A152G | A152G | A152G | A152G | A152G | A152G | A152G | A152G |
| 13 | Bushing | 1 | | | | A | A . | A | A . | A |
| 14 | Bearing Sleeve | 1 | | | | • | | | • | |
| 15 | Nut | 1 | | | | A | A . | A | A . | A |
| 16 | Gasket | 1 | | | | A | A | A | A | A |
| 17 | Thread Protector | 1 | A | A | A | A | A | A | A | A |
| 18 | Coupler | 1 | CR400 | CR400 | CR400 | CR400 | CR400 | CR400 | CR400 | CR400 |
| 19 | Coupler 0 ring (not shown) | 1 | A | A | A | A | A | A | A | A |
| 20 | Caution decal (not shown) | 1 | A | A | A | A | A | A | A | A |
| 21 | Enerpac Decal (not shown) | 2 | A | A | A | A | A | A | A | A |
| 22 | Dust cap (not shown) | 1 | A | A | A | A | A | A | A | A |
| 23 | Saddle 0 ring (not shown) | 1 | A | A | A | A | A | A | A | A |

■ = RC15K50 (kit contains all parts marked with ▲)

▲+■ = RC15K70 (kit contains all parts marked with **▲+■**)

Note: Viton seals are available for items 6 and 10: Order Repair kit RC156KV in addition to Repair kit RC15K50



| Item nr. | Model | Torque/remark |
|----------|--------------------|---|
| 3A | RC156 up to RC1514 | Firmly tighten screw to assure contact with the plunger |
| 3B | RC151 up to RC154 | 5.4 - 6.8 Nm (4 - 5 ft lbs) |
| 7 | All | Washer to be placed with sharp edge towards U Cup |
| 11 | All | 7.9 - 10.2 Nm (70 - 90 in lbs) and loctite 222 |
| 15 | RC156 up to RC1514 | 11 - 14 Nm (8 - 10 ft lbs) |
| 18 | All | 34 - 81Nm (25 - 60 ft lbs) |
| 18 | All | Use Loctite 545 or teflon tape |



To maintain your warranty, have your products inspected and repaired by an authorised Enerpac Service Centre

www.enerpac.com